CombiLock 200






Highlights

- Opening by rotating the keypad
- Additional authentication via transponder (RFID) prior to lock release possible
- Overwind protection when opening
- Optional: Thin spindle with a diameter of 8 mm available (existing bores at the safe can be used)
- Access protected unlocking of the keypad
- Extended hole pattern at the base plate (existing bores can be used)
- Mechanical locking upon opening

Functions	CombiLock 200 simplex	CombiLock 200 pro	CombiLock 200 multi	CombiLock 200 pro RFID	CombiLock 200 multi RFID	CombiLock CIT
Security class (VdS/ECB-S)	2/B	2/B	2/B	2/B	2/B	2/B
Switch motor/manual release	■	■	■	■	■	■
Master code	■	■	■	■	■	■
User codes	1	9	50	9	50	1
RFID transponder				9	50	1
CIT functionality				■	■	■
Quick unlocking code	■	■	■	■	■	
Manipulation blockout	■	■	■	■	■	■
Dual code/opening	■	■	■	■	■	■
Time programs		■	■	■	■	■
Unlocking/opening delay	■	■	■	■	■	■
Protocol/date and time		1,000	1,000	1,000	1,000	1,000
PC software	CombiComm	CombiComm	CombiComm	CombiComm	CombiComm	CombiComm
Battery operation (in keypad)	2x (AA)	2x (AA)	2x (AA)			
Optional power supply connection PowerXT*		■	■	■	■	■
Optional blocking device CombiXT (VdS C)		■	■	■	■	■
BAS connection**		■	■	■	■	■
Duress alarm **		■	■	■	■	■
External release/blocking**		■	■	■	■	■


* in connection with RFID mandatory

** only in connection with CombiXT (PowerXT not necessary if CombiXT is used)

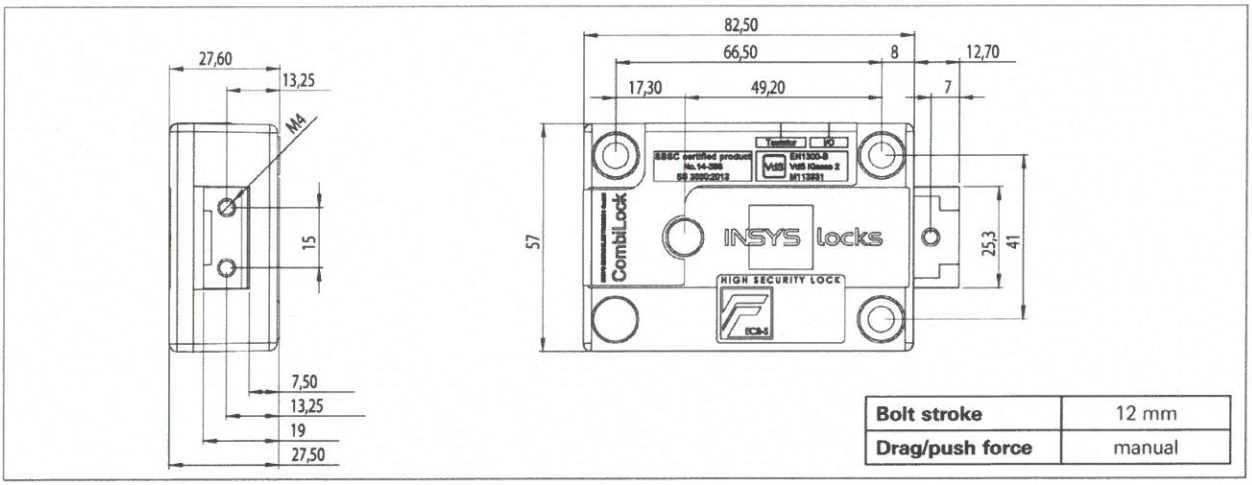

Bolt stroke	12 mm
Drag/push force	manual

CombiControl CL38 - operating terminal

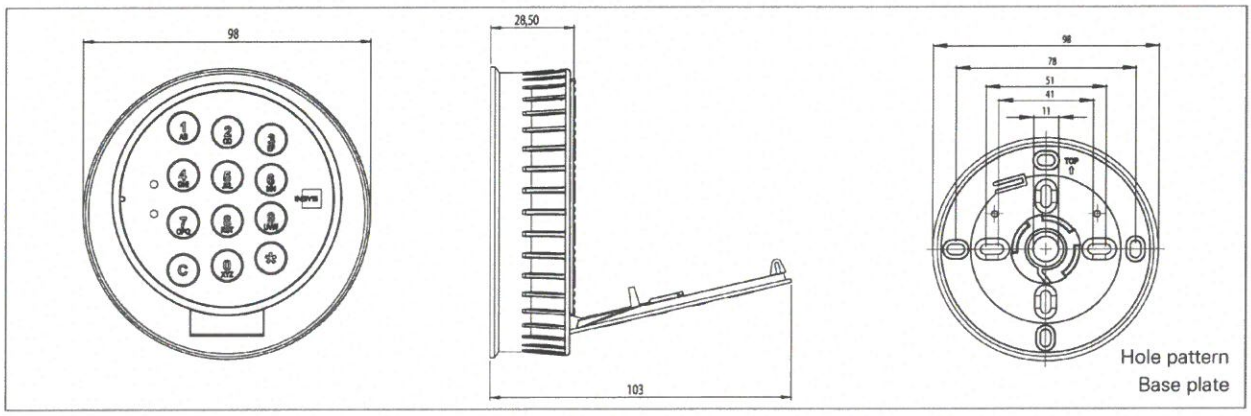

System Components



Operating terminal
CombiControl CL38
CombiControl RFID



Lock
INSYS Lock 200



Extension unit
PowerXT I/II



Expansion unit and blocking device
CombiXT



Accessories
e.g. transponder card/ keyring pendant



Accessories
CombiComm

We reserve the right to alter the specification without prior notice.

Head office
Robur Safe AB
Lundbyvägen 8
SE-311 68 SLÖINGE
Phone: +46 346 260 260
Fax: +46 346 260 222 info@robursafe.com www.robursafe.com

Robur Safe AB - 01 2019